




## Replacement of the 3rd brake light



The area to dismantle (fold down the rear seats).



There are 3 panel trim retainers and those are easy (use a flat bladed tool).

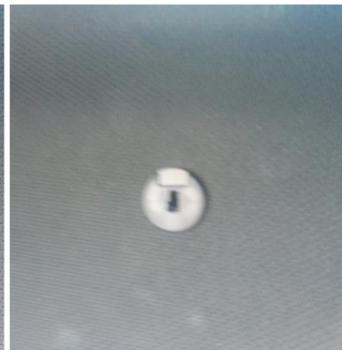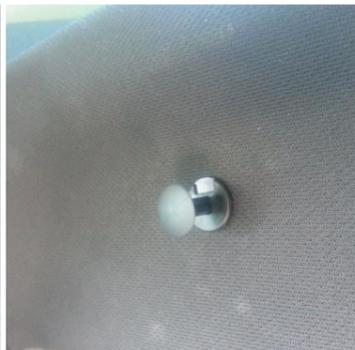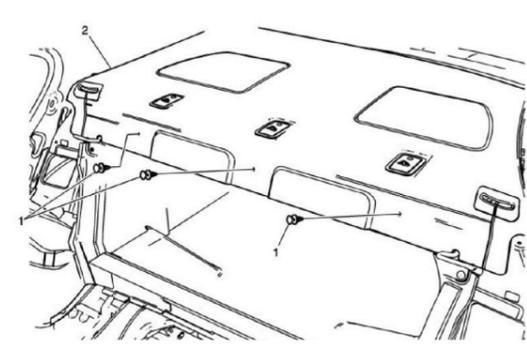

Panel trim retainer (Qty 3).




Don't think it's needed, but I took off the top of the soundsystem.



C-Pillar's upper trim panel.



Use a flat bladed tool to release the retainer from the C-pillar panel.

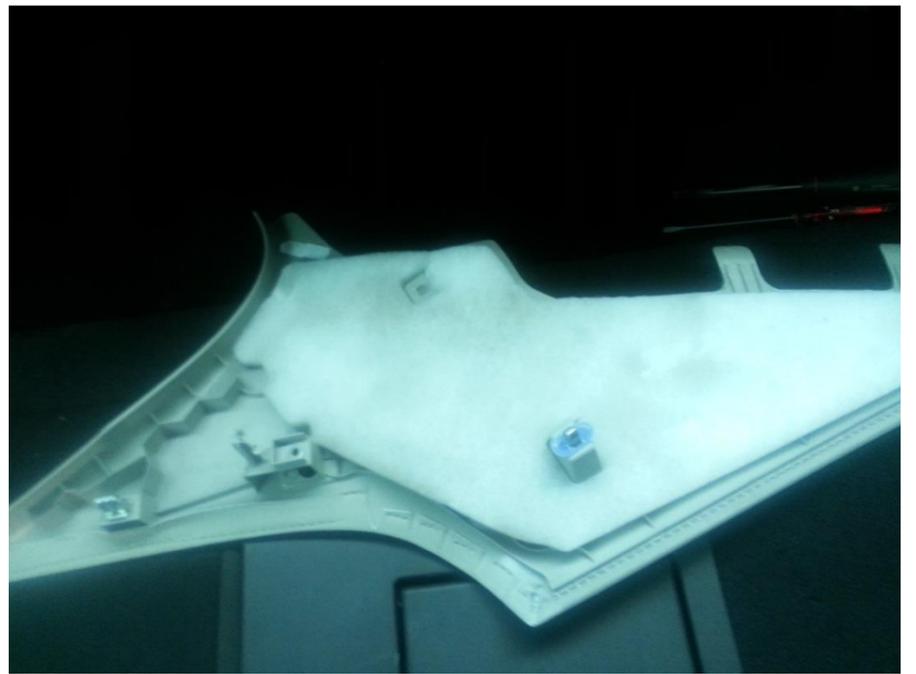

When the screw is off pull the C-pillar panel towards you carefully until the 3 brackets are off, and then pull it in the direction of the front of the car.



Disconnect the white electrical connector in the middle of the picture above (use a small flat bladed tool to unlock the connector).

Remove the seat belts guided and slide the belt through the slots in the panel, and then the shelf is ready to come off. Lift it up in the front and pull towards you slowly.

It's electrical wires to the window heating that can be damaged if you pull too hard and carelessly.





These two can be a little tricky to get off and easy to damage the old plastic bolts, but easier to get on to the new bolts.



The old one is off and...

The new one is ready to go on shining ☺

Now it's just to follow the other way around, I would do it myself next time also.

Plockst 05-12		Kundnr 6074	Ordernr 141128-0339-7	Batchnr 9327
Posnr 1	Typ 10	Artikelnr 13299397	Best. antal 1	Lev. antal
Löpm 0	Plan	Benämning EXTRA BROMSLJUS	Uland IT	
Osl 2	Otyp 0	Anmärkning	Packst 4	



If someone is apprehensive about pulling out the c-pillar covers because of the airbags. Here are some pictures where you can see that they are placed from the C-pillar and up over the doors.

